


Short instructions

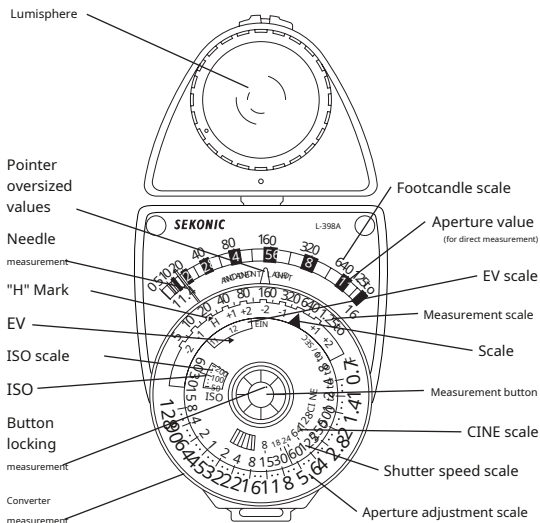

ISO setting

Rotate the internal drive until the desired ISO value appears.

Measurement

Press the MEASURE button. The measurement hand will move on the scale. Then release the button. The hand stops on a footcandle scale.

Rotate the DIAL ring so that the same footcandle values (black triangle) are displayed. Then read the aperture and shutter speed values from the outer ring and set up your camera.

NOTE:

If the metering hand moves to the right off the scale, use HIGH SLIDE on the top of the exposure meter and set the values to the letter H.

Comparing values

Take the measurement and then turn the inverter to the home position. Take a second measurement and compare the measurement results.

Constant values

Hold down the measurement button and turn it to the 3:00 position. To unlock, turn counterclockwise.

EV

After performing the above measurements, read the EV values.

CINE

After the measurement, check the values of the CINE cinema scale.